



# Installation Instructions

Frameless Glass Door

1900x745x8mm

1900x672x8mm

1900x617x8mm Curved

# Installation Instructions



technology... at no extra charge

Glass Panels are treated with Clearshield which gives a lasting protective barrier against water deposit build up. Please ensure the panels are installed with the Clearshield coating inside the showering area; the treated side of the glass is indicated by a clear sticker. Do not remove this sticker until installation is complete.

## Important Information

Please read these instructions carefully before starting installation and keep for future reference. Remove all packaging and check the product for missing parts or damage before starting installation.

When drilling or fixing into walls or floor it is essential that you check for pipes or wires before commencing.

Certain spare parts and additional components are available if necessary and these can be obtained by calling the help line number at the end of the instructions.

When you are ready to start, make sure that you have the right tools to hand and that the installation area is clean and dry.

**Note:** To prevent leaks, silicone must be applied on the outside of the shower and not on the inside. Save this manual for future reference.

## Safety Requirements



Two person  
installation




Gloves



Safety Goggles

This is a glass product, therefore gloves and safety goggles should be worn during installation. We recommend that fitting should be carried out by two people.

## Tools Required (Not supplied)

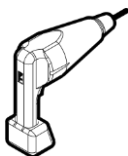

Electric Drill




7mm & 5.5mm  
Drill Bits



Sealant Gun  
& Silicone Sealant



Pencil

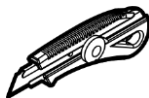

1 Knife



Measuring Tape



Level



Cross Head Screwdriver

## Parts Supplied



A Glass Panel 1



B Wall Fixing Plug 8



C Wall Fixing Countersunk 8



D Door Hinge 2



E Optional Plastic Door Seal 1




F Door Handle Assembly 1

### IMPORTANT!

The Frameless Glass Door can be installed in two ways; either as part of a larger enclosure, i.e., Frameless Glass Door & Frameless Panel (available separately from your merchant) or as a Frameless Glass Door to be used in conjunction with tiled cubicles. As the instructions vary slightly accordingly please ensure that you assess in which scenario you will be installing the product and follow the corresponding instruction.

### Scenario 1: Installing the Frameless Glass Door in conjunction within a complete shower Cubicle.

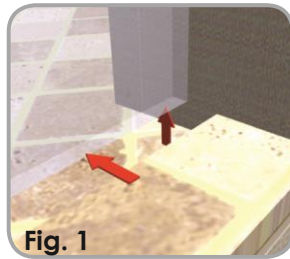

#### Step 1


Secure the Door Hinges (D) to the Glass Panel (A). Then offer the Glass Panel (A) into place allowing a gap at the bottom to ensure that the door can swing freely. If you have installed a tiled lip as part of the construction of your Elements Complete Shower Cubicle, we recommend that the Glass Panel (A) be installed on the inside of the lip rather than on top of it (see fig. 1). This will allow the water to be contained better. If you choose to fit the optional Plastic Door Seal (E), please ensure that you take it into account within your height measurement so that the door can swing freely over the tiled lip when installed.

**NOTE:** Your choice of complete shower cubicle could have an integral reinforcement strip built into one or both of the side walls (refer to the instructions that came with your product for further information), if not then proceed to Scenario 2. Please ensure that you install the hinges against the wall with the reinforcing strip to fully support the door.



### Step 2

Mark the position of the holes through each Door Hinge (D) then place the Glass Panel (A) and Hinge assembly to one side.

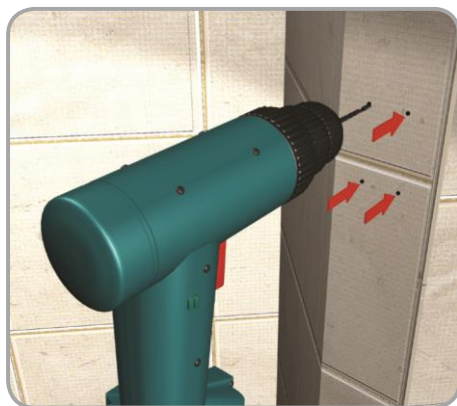

### Step 3

Drill a pilot hole (2 – 3mm) through the tile and into the reinforcement strip pre-bedded into the wall of your shower cubicle, then drill a larger hole (4mm) through the tile only, taking care not to drill through the strip. Repeat for the remaining pencil marks (eight in total).



### Step 4

Disregard the Wall Fixing Plugs (B) for this installation; the reinforcing strip will hold the screws tightly in place. Offer the Glass Panel (A) into position then fully tighten the Door Hinges into place using through the Wall Fixing Countersunk Screws (C).



**Fig. 2**

### Step 5

Attach the door handle assembly (F) as shown in fig. 2.

**Scenario 2: Installing the Frameless Glass Door in any other scenario (where a reinforcement strip has not been previously installed as standard).**



#### **Step 1**

Secure the Door Hinges (D) to the Glass Panel (A) then offer the Glass Panel (A) into place allowing a gap at the bottom to ensure that the door can swing freely. If you have installed a tiled lip as part of the construction of your shower base we recommend that the Glass Panel (A) be installed on the inside of the lip rather than on top of it (see fig. 1). This will allow the water to be contained better. If you choose to fit the optional Plastic Door Seal (E), please ensure that you take it into account within your height measurement so that the door can swing freely.




#### **Step 2**

Mark the position of the holes through each Door Hinge (D) then place the Glass Panel (A) and Hinge assembly to one side.



### Step 3

Drill eight holes as marked in Step 2 using a 7mm drill bit then push four Wall Fixing Plugs (B) into the holes.

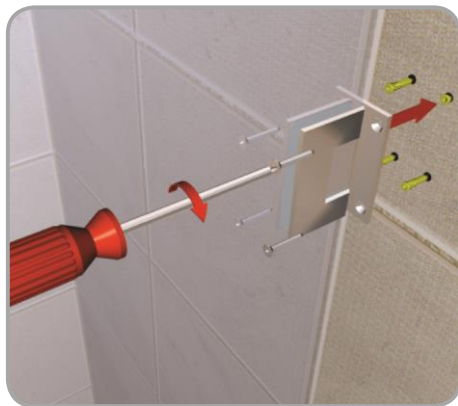

### Step 4

Offer the Glass Panel (A) into position then fully tighten the Door Hinges into place using through the Wall Fixing Countersunk Screws (C).



**Fig. 2**

### Step 5

Attach the Door Handle Assembly (F) as shown in fig. 2.

### **Customer / Technical Services**

For any technical or installation queries please contact your merchant.

Our liability under any guarantee expressed or implied is strictly limited to replacement of defective goods or a refund at our discretion and no consequential losses will be entertained. Proof of purchase will be required.