



**STEP 1**

Spread the adhesive according to the manufacturer's instructions. REMOVE THE EXCESS MORTAR FROM THE EDGES USING A TROWEL.

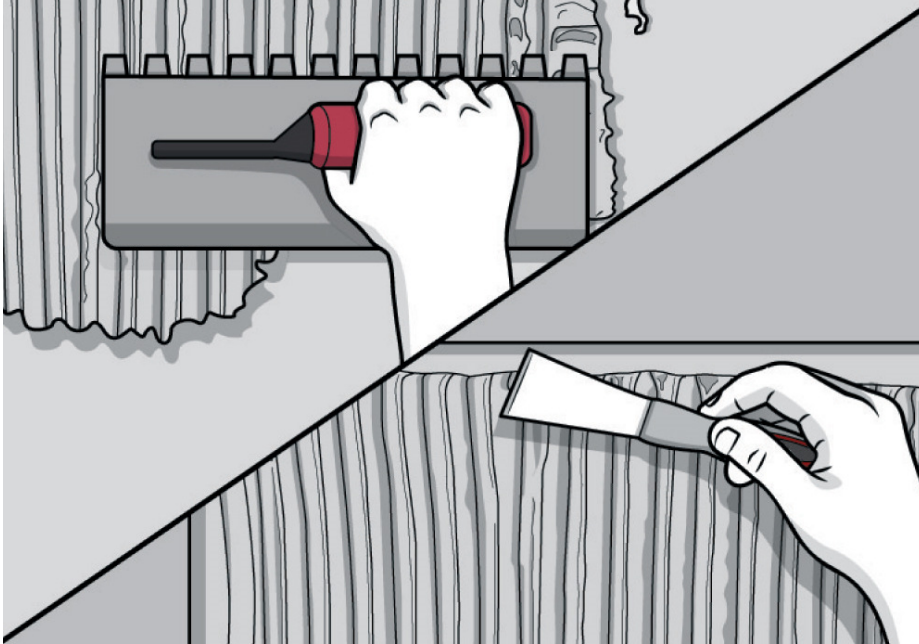


**STEP 2**

Insert a T-LOCK clip underneath the tile. According to your tile size, set one or more T-LOCK clips per side.

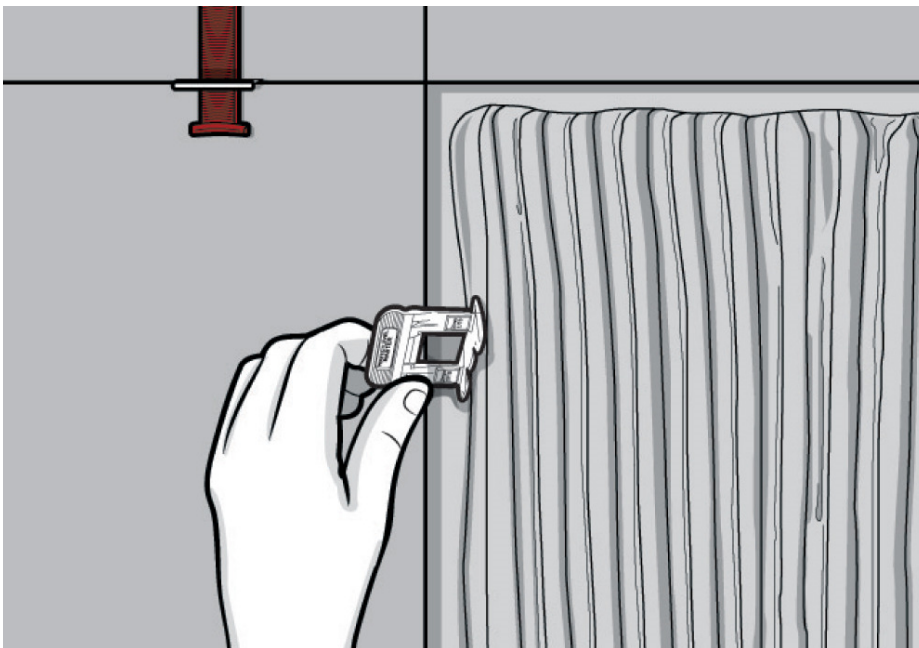


**STEP 3**

Install the adjacent tile ensuring proper bondage by firmly pressing in place.

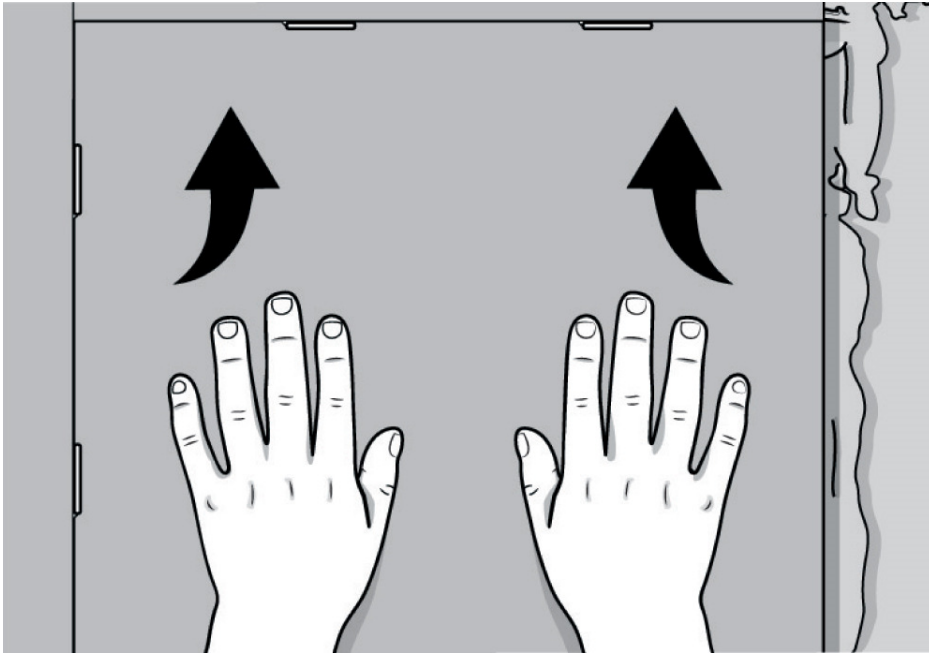

**STEP 4**

Insert a Wedge into the clip until you feel resistance. TIGHTEN, TO ENSURE THERE IS NO VARIATION IN HEIGHT OF THE ADJOINING TILES.

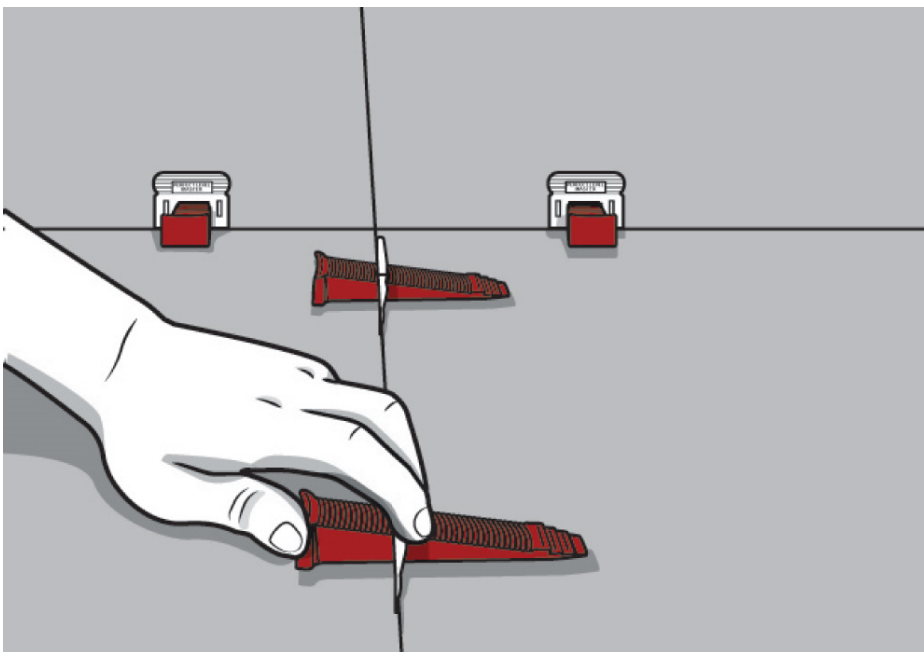

**STEP 5**

After the adhesive has cured to the manufacturer's specifications, clips and wedges can be removed using a rubber mallet or by kicking them out following the direction of the grout joints.

WEDGES ARE REUSABLE, CLIPS ARE DISPOSABLE.

